



NOTICE DE MONTAGE 1/2 PENDERIE
 INSTRUCTIONS ON ASSEMBLING CABINET
 MONTAGE-INSTRUCTIES VOOR DE KAST
 MONTAGEANLEITUNG SCHRANK
 INSTRUCCIONES PARA EL MONTAJE DEL ARMARIO
 ISTRUZIONI DI MONTAGGIO DELL'ARMADIO

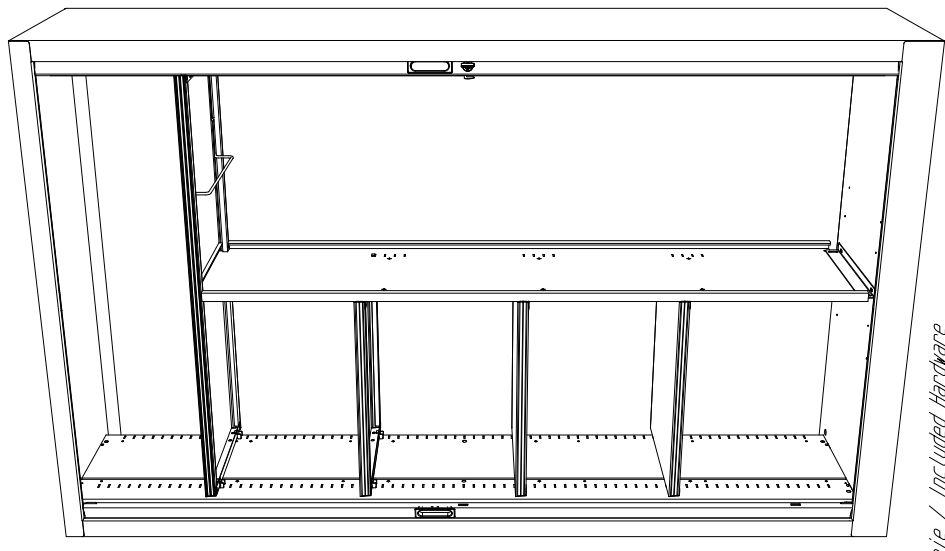

Tournevis nécessaire non fourni
Screwdriver needed
Schraubenzieher notwendig
Destornillador necesario
Schroevendraaier vereist

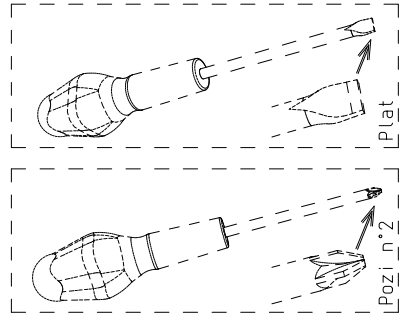

Quincaillerie fournie / Included Hardware
Angelieferte Eisenwaren / Accessories Included / Izerwaren meegeleverd

