



NOTICE DE MONTAGE  
MONTAGEANLEITUNG  
MONTAGE-INSTRUCTIES






ASSEMBLING INSTRUCTIONS  
INSTRUCCIONES PARA EL MONTAJE  
ISTRUZIONI DI MONTAGGIO

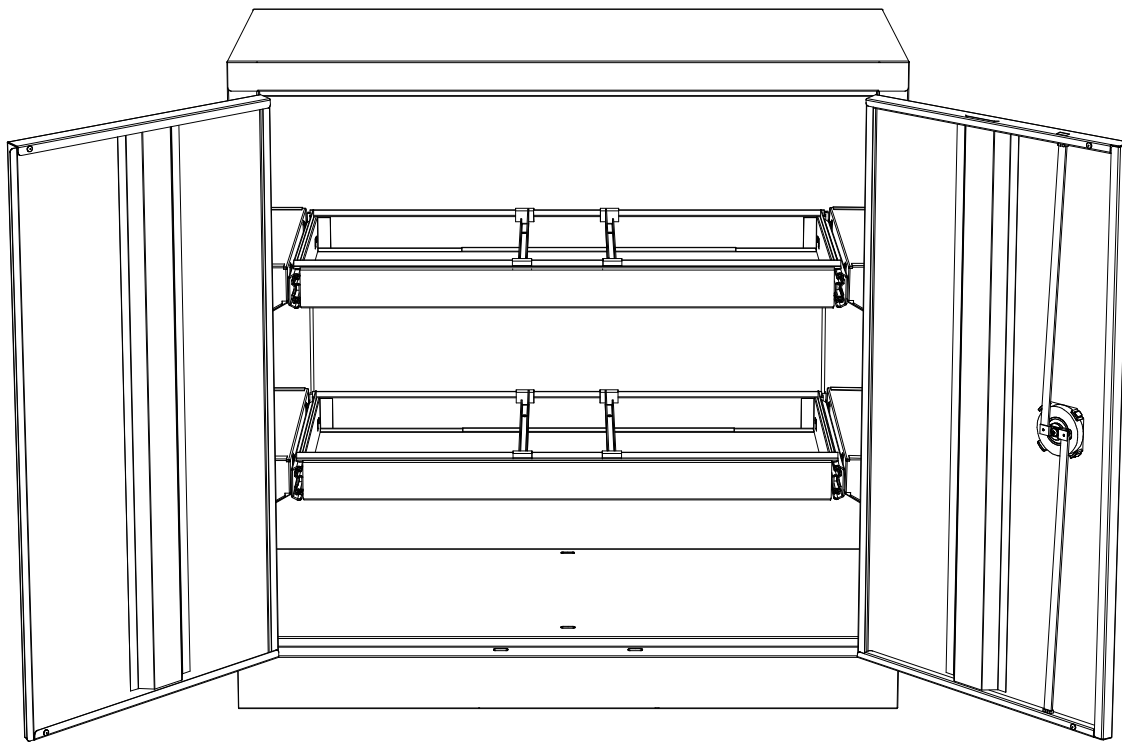







*Tournevis nécessaire non fourni  
Screwdriver needed  
Schraubenzieher notwendig  
Destornillador necesario  
Schroevendraaier vereist*

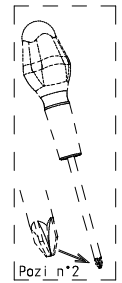

*Quincaillerie fournie  
Included Hardware  
Angelieferte Eisenwaren  
Accesorios Incluidos  
Izerwaren meegeleverd*

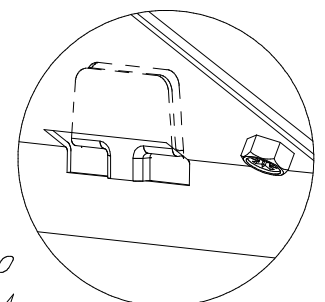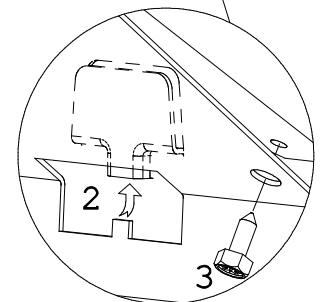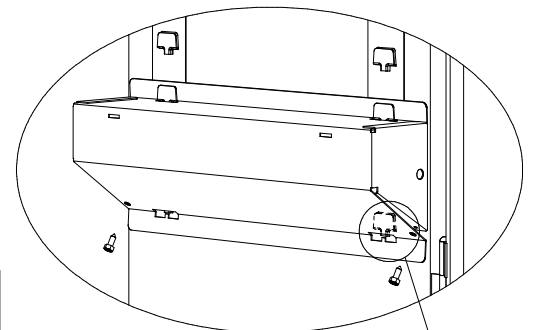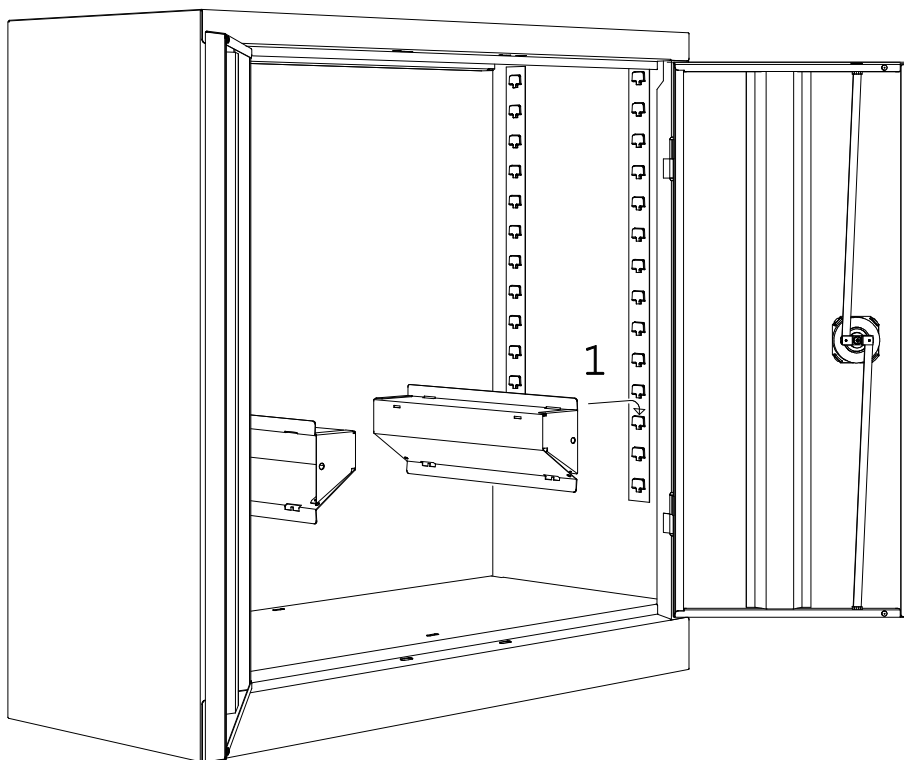

*Recto  
P100891 A*

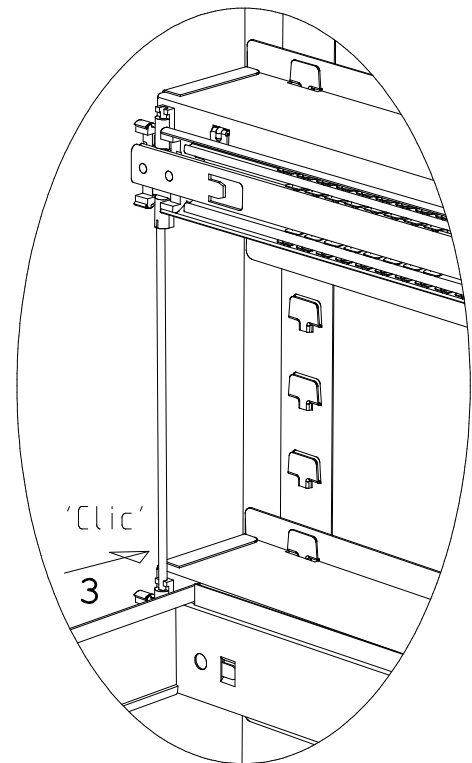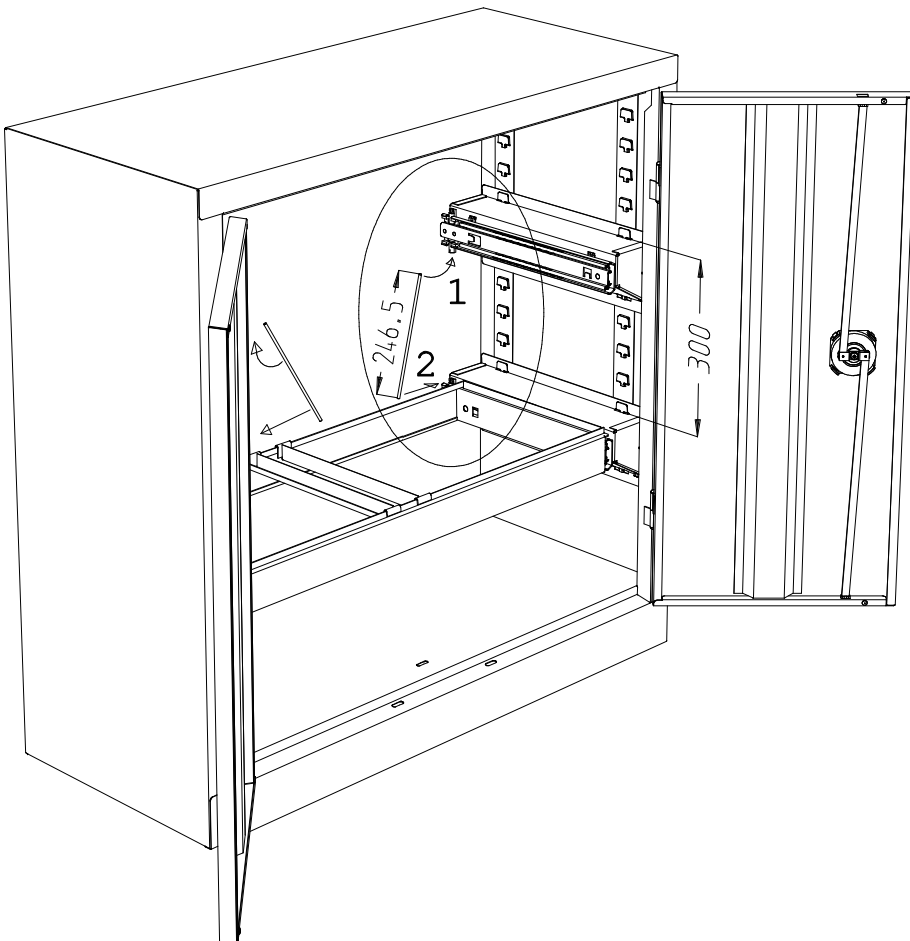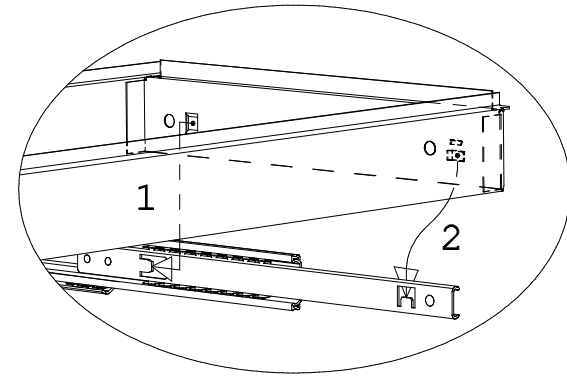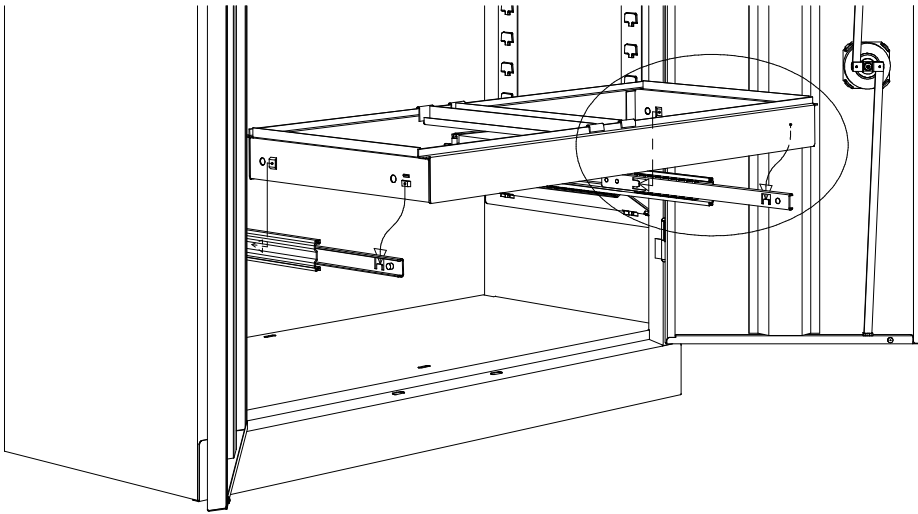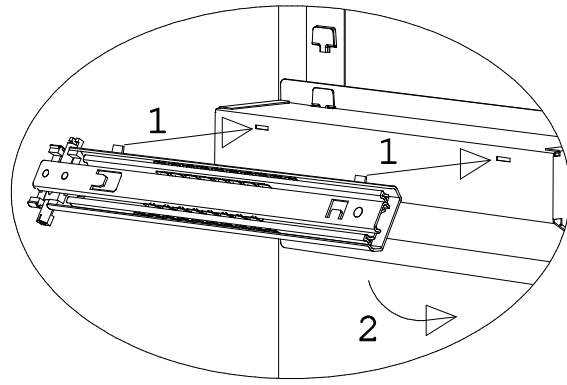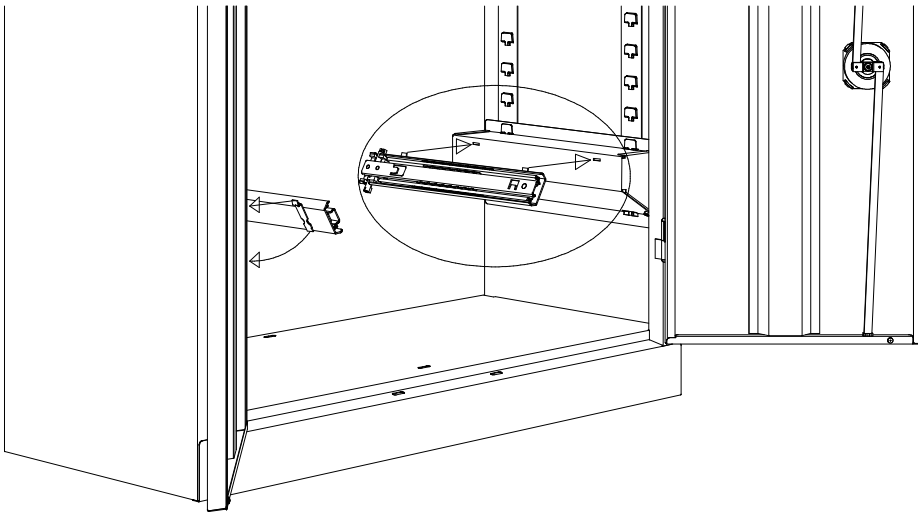

Verso  
P100891 A